

# JetCam tips for use

## Startup

Fill the system with water when idle.

## Operation

Always use a roller guide or hose protection.

Increase pressure gradually up to a maximum of 160 bar. Do not execute large, sudden pressure increases.

Handle the contacts in the nozzle (whisk) carefully.

Do not kink the first 5 m of the hose.

Use an impact guard with the camera head whenever possible.

Reduce the pressure when pulling the nozzle back to prevent damage.

### Troubleshooting when removing the JetCam hose from the pipe:

- Rotate the hose and move it forward and back.
- Reduce or eliminate pressure.
- Do not pull the hose out using force or hydraulic pressure.



## Maintenance

### After use:

- Check the nozzle, hose, steering piece, and camera head for wear.
- Blow out the JetCam with compressed air via the ½" water connection. Allow it to dry. Remove visible soiling from the system.
- Treat the nozzle with biodegradable preservative spray.
- Remove and clean all nozzle inserts.
- For a clear view, treat the camera lens with C290 lens cleaner and C291 lens polish.
- Recharge batteries every 4 weeks (do not deep discharge).

## Troubleshooting

### Camera does not turn:

- Remove the nozzle insert for the guiding nozzle. Remove soiling.

### Poor cleaning quality, or nozzle does not rotate:

- Remove all nozzle inserts. Remove soiling.

### JetCam does not display image:

- Check connections (camera head, steering piece, hose).
- Deactivate 512 Hz location transmitter (toggle switch for JetCam 40 Pro, app for JetCam 4.0).

### Image flickers:

- Use JetCam intensively for 15 minutes.

