

JetCam Tips for use

Startup

Fill the system with water when idle.

Operation

Always use a roller guide or hose protection.

Increase pressure gradually up to a maximum of 160 bar. Do not execute large, sudden pressure increases.

Handle the contacts in the nozzle (whisk) carefully.

Do not kink the first 5 m of the hose.

Use an impact guard with the camera head whenever possible.

Reduce the pressure when pulling the nozzle back to prevent damage.

Troubleshooting when removing the JetCam hose from the pipe:

- Rotate the hose and move it forward and back.
- Reduce or eliminate pressure.
- Do not pull the hose out using force or hydraulic pressure.



Maintenance

After use:

- Check the nozzle, hose, steering piece, and camera head for wear.
- Blow out the JetCam with compressed air via the ½" water connection. Allow it to dry. Remove visible soiling from the system.
- Treat the nozzle with biodegradable preservative spray.
- Remove and clean all nozzle inserts.
- For a clear view, treat the camera lens with C290 lens cleaner and C291 lens polish.
- Recharge batteries every 4 weeks (do not deep discharge).

Troubleshooting

Camera does not turn:

- Remove the nozzle insert for the guiding nozzle. Remove soiling.

Poor cleaning quality, or nozzle does not rotate:

- Remove all nozzle inserts. Remove soiling.

JetCam does not display image:

- Check connections (camera head, steering piece, hose).
- Deactivate 512 Hz location transmitter (toggle switch for JetCam 40 Pro, app for JetCam 4.0).

Image flickers:

- Use JetCam intensively for 15 minutes.

